

GOOD
MASSAGE

GM450 Full Body Massage Chair
Product manual

(Please Read the Manual Carefully Before Installing and Using the Product)

Foreword

Thank you for purchasing this product. Please read this user manual carefully before using to ensure proper operation.

Contents

Preliminary Checks.....02

Structure.....04

Controller Instructions.....06

How to Use.....07

Product Specifications.....11

Important Safety Instructions.....12

 
Troubleshooting Method.....13

Storage and Maintenance.....14

Below form shows the name and content of hazardous substance in this product.....15

Preliminary Checks

(1) Unpack the carton and take all massage chair units out of the carton.

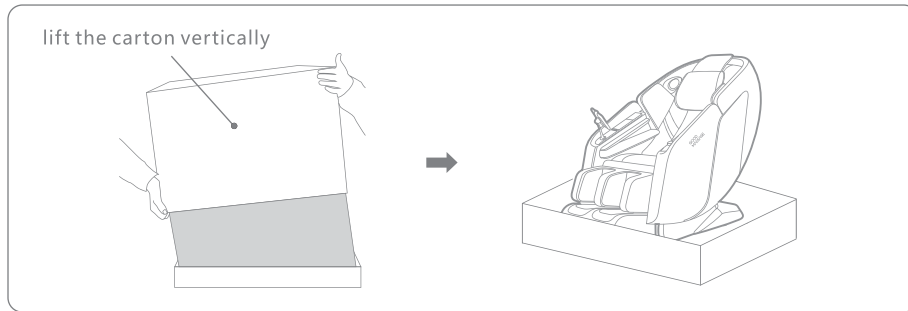

1.1、 Remove secure straps and lift the carton vertically.

2.2、 Take all accessories out of the cartons.

(2) Placing the massage chair

*Carry the massage chair out of the carton and place at a desired location.

*Do not put this product near heat source, open flame or in direct sunlight.

 
*This may cause fading or damage.

*The bottom of the massage chair may scratch the floor, we recommend placing a piece of carpet or soft mat underneath it to avoid damaging the floor.

*Please allocate clearance to the front and back (a minimum 25-centimeter clearance behind the backrest) of the product;

*Do not put the massage chair in high moisture environment or on uneven unlevelled floor.


*Keep it 1 meter away from the TV, radio or other audio/video appliance to avoid signal interference.

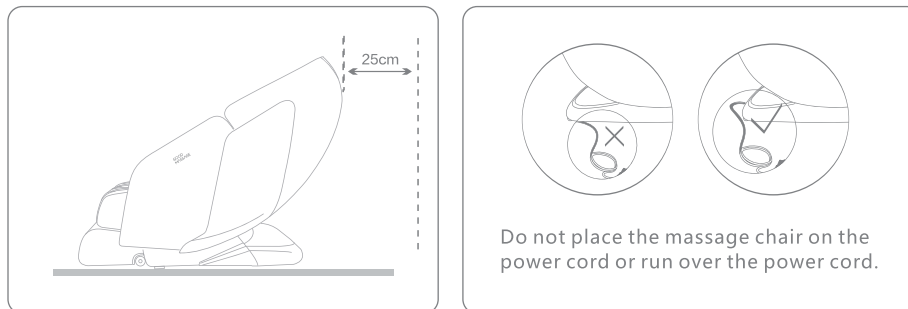

Preliminary Checks


(3) Install tablet holder

 Remove the rubber tip, insert the lower end of tablet holder into the socket and turn clockwise to secure the holder into place.

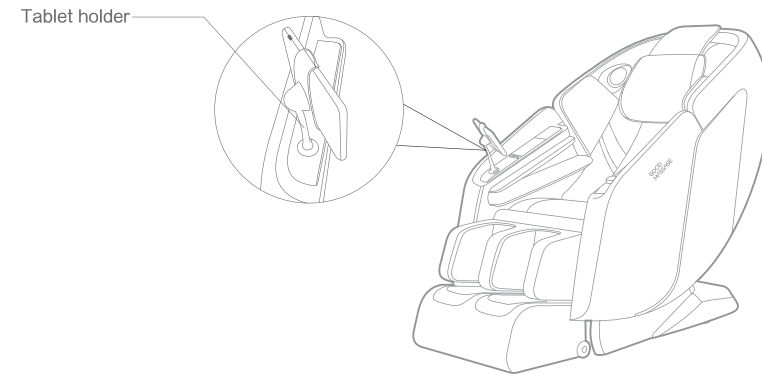


(4) Connect to power

 
Plug the power cord into the chair and connect to the power outlet, turn on the main power switch, you are set to go.

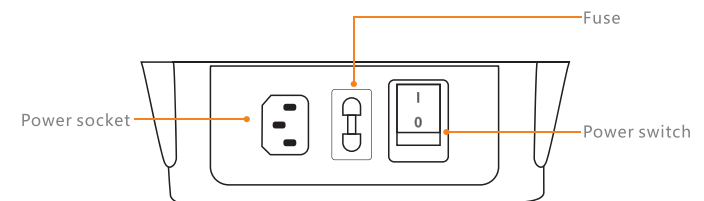

Structure

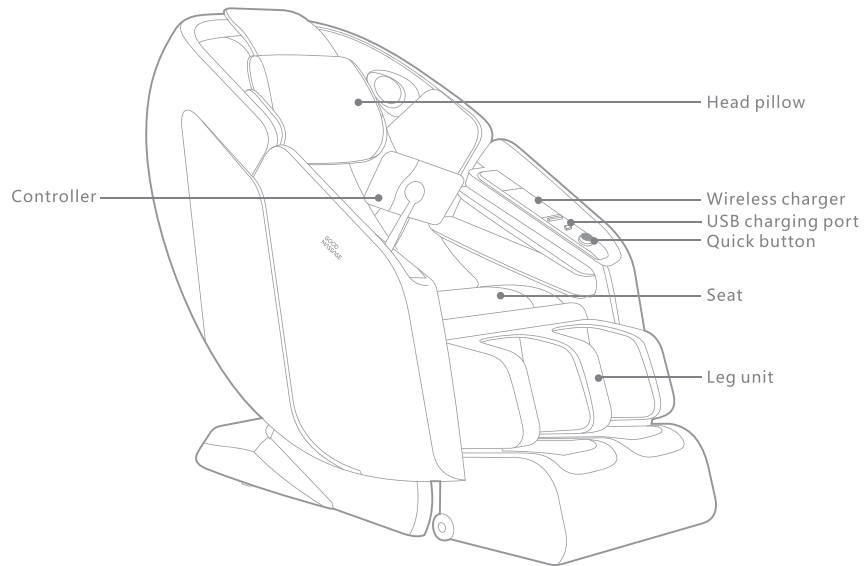 

Moving the Massage Chair

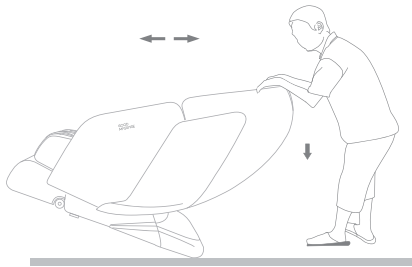 

1. Push down on the backrest and tilt the chair about 30° (see left figure).
2. Roll the chair on its casters to the desired location.

 


WARNING

- *Do not move the chair when there is user inside.
- *Moving the chair may scratch the floor, we recommend placing a piece of carpet or soft mat underneath it.
- *Please hold the backrest firmly when moving the massage chair to avoid falling.
- *Make sure the footrest is fully retracted when moving the massage chair to avoid damage.

Structure


Back of massage chair

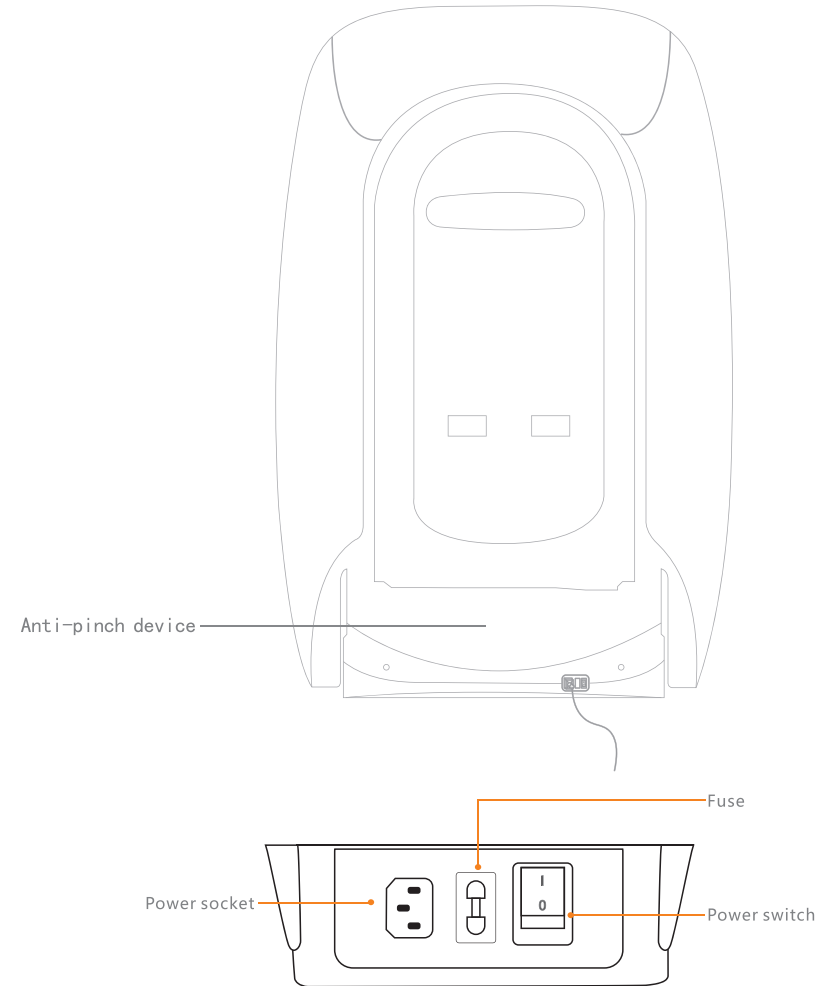

Anti pinch device: the massage chair will stop reclining automatically when any foreign objects (such as hands or children) are sensed, it will continue to recline when foreign object is removed.

Controller Instructions

 Quick button

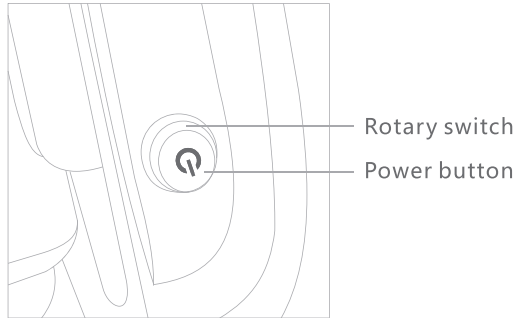

Tablet controller



How to Use

Quick Button Instructions

- Press and hold the power button for 3 seconds to turn on/off massage chair;
- Short press this button to toggle among 8 pre-set Auto massage programs namely: Boss Massage, Lady Massage, Sweet Dreams, Neck & Shoulder, Chair Yoga, Deep Release, Thai Massage and Chinese Massage;
- Rotary switch: rotate this switch to raise/recline the backrest: rotate clockwise to raise backrest, rotate counterclockwise to recline backrest.



CAUTION

*Do not get into the massage chair when the footrest is lifted.

*A sudden excessive load pressed on the backrest or footrest may cause damage to the product or injury to the user.













*Before getting in the chair, please make sure the backrest is restored to upright position, you may recline the chair to desired angles after sitting in the chair.

*Do not put foot, fingers or any other objects in the openings of the chair.






*Make sure there are no children, pets or other obstacles around before adjusting the backrest or footrest angle.

How to Use

Controller Instructions



-  **Child Lock**
When connected to power, press and hold this button for 3 seconds to lock/unlock the controller.
-  **Power Button**
Press this button to turn on massage chair, press again to turn off massage chair.
-  This massage program brings utmost relief and comfort for users who spend long hours at desk.
-  This massage program provides soft and soothing massage to shape body figure and promote metabolism.
-  A Full body soft ,slow and gentle massage with rocking to relax the body and aid the sleep.
-  It uses featured massage techniques to ease the pain and stiffness in the neck and shoulders.
-  Uses moderate kneading and stretching techniques to relax tired muscles and keep them flexible.
-  Adopts shiatsu,kneading and other massage techniques to relieve body fatigue.
-  This massage program conducts intense Thai-style massage techniques to relax the full body muscles after intense exercise.
-  By using kneading,rubbing,shiatsu and tapping massage techniques to treat the body with a pressure free pure indulgence.
-  Press and hold to raise the backrest,release the button to stop.
-  Press and hold to lower the backrest,release the button to stop.

How to Use




-  Press and hold to raise the footrest unit,release the button to stop.
-  Press and hold to lower the footrest,release the button to stop.
-  Press and hold Up button to move the massage rollers up,release the button to stop.
-  Press and hold Down button to move the massage rollers down,release the button to stop.
-  Press this button to switch to manual massage mode, press again to toggle manual massage techniques.

Under manual mode, press this button to toggle among Point, Partial and Full Body massage.You can press and hold Up/Down button to adjust the rollers to the desired position.


Under auto mode,press this button to navigate among:level 1,2,3,4,5 airbag intensity, or Off (deactivate airbag function);

 Under manual mode,press this button to navigate among:full body airbags, upper body airbags and lower body airbags.
-  **4D** Massage intensity button, press this button to adjust the massage intensity, there are 5 adjustable intensity settings.

 
Press to position the chair in Zero Gravity Position,press again to restore to default position.

 Press and hold this button for 3 seconds to deactivate Bluetooth function(default setting:off/on).
-  Press this button to navigate among:level 3,2,1 heating,or Off (deactivate heating function).
-  Press this button to navigate among:level 3,2,1 foot roller speed,or Off (deactivate foot roller function).

Press this button to set massage time.

 You may toggle among 15-20-25-30-10 minutes settings (15 minutes is the default setting).
Time setting will be memorized when you turn off the massage chair.

How to Use

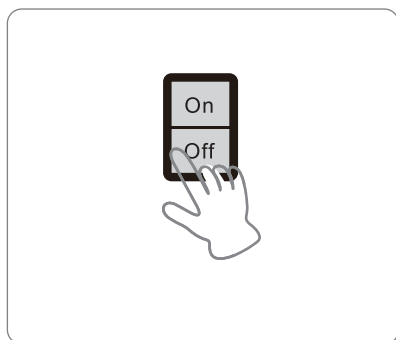

▼
The switch is on the back cover of the power box

*Press the power switch at the armrest to stop all massage motions.

*When not in use for a long period of time, be sure to turn off the power switch.

*Disconnect the power cord from the electrical outlet.

*Do not drag the power cord to avoid damage to the cord, leading to fire or electric shock.

Bluetooth Connection

*When the massage chair is on, the Bluetooth is on as the default setting, you may turn on Bluetooth on your mobile device, choose " GM450 " to pair.

*You can enjoy music when Bluetooth is connected.

Product Specifications

Items	Specifications
Name	GM450 Full Body Massage Chair
Model	GM450
Rated voltage	220-240V~
Rated frequency	50/60Hz
Rated power	150W
Packing dimension	1340mm(L)x780mm(W)x1245mm(H)
Weight	N.W. 90kg G.W. 107kg
Made in	China
Safety design	Class I
Default working time	15 Minutes
Enforcement standard	GB 4706.1-2005 GB 4706.10-2008
This device contains approved wireless LAN / Bluetooth module with an authorization number of CMIIT ID 2021DP9497	

Safety Precautions



warning

Please read all instructions before use

This massage chair must use a socket that matches the plug. Incorrect grounding can cause electric shock. Please do not modify the plugs and sockets without authorization, and be sure to entrust professional technicians to inspect them. When using electrical products, in order to check the risk of electric shock, burns, fire, or personal injury, basic safety precautions should be followed, including the following:

- Be sure to use an outlet that matches the plug.
- Make sure that the plug is fully inserted into the socket to reduce the risk of short circuit or fire.
- After use or before cleaning, be sure to unplug the plug in time.
- Do not use this product at high temperatures.
- Do not store or use this product outdoors or in direct sunlight.
- If there is a sudden power failure during use, please set the switch to the "0" position immediately, and unplug the plug to avoid damage to the product when a call comes in.
- Do not operate the massage chair if the cord is wet or damaged.
- Do not insert or unplug the plug with wet hands to avoid accidents.
- When a child, handicapped, or handicapped person is near or using a massage chair, someone must be present to look after him.
- Only use this product for the purposes described in this manual.
- Do not use accessories not provided by Momoda.
- Do not stand, sit or jump on the calf rest. So as not to cause damage.
- Please do not try to sit on the armrest or backrest, so as not to tip the massage chair over and cause an accident.
- Do not go to sleep during the massage.
- Please keep the massage chair clean and avoid inserting other objects into the gaps of the massage chair
- Do not move the massage chair directly by pulling the power cord.
- Before each use, check whether there are abnormal cracks in the flannelette of the backrest of the massage chair.
- This product is designed for home use only.
- When you are not sure whether you can use the massage chair, please consult your doctor.
- In order to avoid discomfort or injury caused by using this massage chair, the following people should consult a physician before using this product; Those receiving treatment, those with back disease, those with abnormal or distorted cervical spine.
- If you feel pain during use, please stop using it immediately. If it is damaged during use, please seek medical attention immediately.
- Do not massage red, swollen or inflamed skin.
- This product only provides comfortable massage enjoyment for the family. It is not a professional massage medical device, so it cannot replace professional treatment.
- It is recommended to use the massage chair for 30 minutes a day, and massage the same part should not exceed 15 minutes, otherwise excessive massage will result in counterproductive effects, and long-term use will cause the massage chair to overheat and shorten the service life of the product.
- Do not use this product in an environment where gas or oxygen is injected.
- This product is not suitable for children under 12 years of age.



warning

- Those who are not allowed to use this product: those who are physically, emotionally, or mentally defective, or who lack experience and knowledge. Unless they are supervised or instructed by the person responsible for their safety regarding the use of the product.
- Children should be supervised to ensure that they do not play with the massage chair.
- If the power cord is damaged, it must be replaced with a special cord or a special component purchased from its manufacturer or maintenance department.
- The surface of the appliance heats up, so people who are not sensitive to heat must pay attention to it.
- Do not use this machine under a voltage that does not meet the standards of this machine.
- This product must use a grounded three-core power socket, and there should be a reliable and good grounding device.
- Damaged leather or cloth covers should be replaced in time. Do not use this machine to avoid personal injury.
- Do not allow water or moisture to enter the hand controller to avoid control failure.


10 Abnormalities and handling methods

Possible situation	Approach
The sound made during operation	The sound produced by the structural design will not affect the machine. Check if the power head is plugged in or is powered on. Check whether the power switch of the massage chair is in the "I" position.
The power is plugged in, but the massage chair cannot be operated.	Check whether the power cord is damaged. Check that the fuse is damaged and replace the fuse. Check whether the manual control line is inserted well and screwed
The backrest cannot be raised and lowered freely.	Check whether there are foreign objects stuck in the backrest and lower legs. Check whether the connecting wire is loose.
During use, the controller can be operated, but the massage chair cannot be operated.	After a long period of operation, if the temperature of the machine is too high, the massage chair will be automatically in the temperature protection state, please turn off the power and use it for 30 to 50 minutes to let the internal heat dissipation of the machine.
During use, the controller cannot be operated, and the massage chair also stops operating	After the automatic timing function is activated. If the set time is up, please press the button again to control it.

If an abnormal situation occurs, in order to prevent accidents, please stop using it and unplug the power cord.

If the following solutions are still invalid, please contact the after-sales service center.

 product maintenance

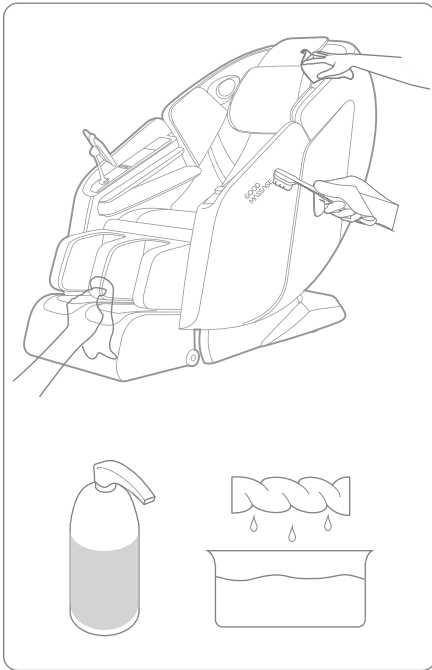

clean

Do not use steel wool, abrasive cleaners or corrosive liquids (such as gasoline or acetone) to clean the product.

 
- ❶ Unplug the plug from the power socket.
- ❷ Clean the massage chair, remote control and power cord with a dry cloth.
- ❸ Do not use a damp cloth or detergent.

Store

- ❶ Unplug the plug from the power socket.
- ❷ Store this product in a cool and dry place away from sunlight.
- ❸ Do not place heavy objects on the product.

If the leather case is damaged or mechanical failure, please stop using this product and inquire from the authorized after-sales service center or customer service center in your country (region).

If you do not use it for a long time, please unplug the power cord!

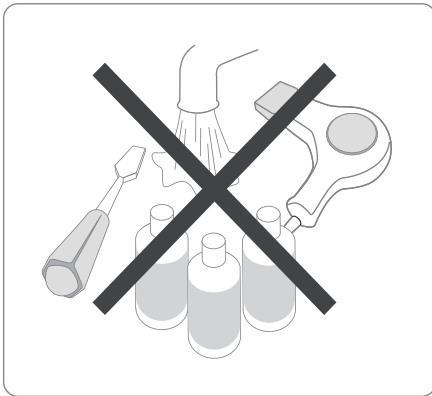

Name and content identification table of hazardous substances in this product

Name	Harmful Materials					
	(Pb)	(Hg)	(Cd)	(Cr)	(PBB)	(PBDE)
Case	○	○	○	○	○	○
Circuit Board※	○	○	○	○	○	○
Metal	○	○	○	○	○	○
Rubber	○	○	○	○	○	○
Power Cable	×	○	○	○	○	○
Internal Signal Connection Line	○	○	○	○	○	○
Leather	○	○	○	○	○	○

This form is compiled in accordance with the provisions of SJ/T 11364

※ Circuit board components include parts made up of printed circuit board machines, such as resistors, capacitors, integrated circuits, connectors, etc.

○ Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572.

× Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in GB/T 26572.

Environmental protection use period description

This electrical product is used under the conditions described in the manual, and the harmful substances or elements contained in this product will not leak out, and will not cause pollution to the environment or cause serious damage to people and property for a period of 10 years.



Our company reserves the right to improve the product and the manual. If there is any change, we will not notify you. The appearance of the product is subject to the actual product; this booklet has been carefully checked, but it does not rule out the possibility of printing errors or misunderstandings in the content. Please forgive me.